

15 x 10 cm

Halloween spiderweb LED incl.

Instructions

Read and follow all instructions that are on the product or provided with the product.

- Carefully take the product from the box.
- Open the lid of the battery case and load 3 "AA" batteries. Close Battery case.
- Push the ON/OFF button located on the battery case to operate.
- Remove batteries from battery case if consumed or if product is to be left unused for a long period of time. Store the product neatly in a cool, dry place.
- Do not clamp the wire light into doors or windows or fix with nails.
- For indoor use.
- This is a decorative item and not a toy! For Adult Use Only.
- Do not use this product for other than its intended purpose.

IF NO LIGHTS LIGHT UP

- Make sure that the ON/OFF switch is in the "ON" position;
- Check to make sure that the batteries have been placed in the batter box in correct polarity +/-;
- Replace existing batteries with brand new batteries;

BATTERY REQUIREMENTS

This product is battery operated and powered by 3x 1.5V AA Batteries (Batteries not included).

Battery Type: "AA" Size Batteries Recommended

Rating: 1.5V

Quantity: 3 PCS

After continuous use, the light may begin to fade. When this happens it is time to change the batteries.

SWITCH OPERATION:

ON: Lighting on.

OFF: Lighting off.

WARNING!

Battery inserting, removal and disposal should be done by adults only.

Insert the batteries on the back of the unit paying close attention to the polarity.

Used batteries should be disposed of according to your local and state government guidelines.

Do not throw batteries in household trash.

Keep away from children.

Do not mix old and new batteries. Do not mix alkaline, standard (Carbon - Zinc), or rechargeable (Nickel - Cadmium) batteries.

Do not attempt to recharge non rechargeable batteries.

Remove the batteries promptly, when consumed or the item is not in use.

Please retain these instructions for future reference.

Made in China

IP44

