
## **ASSEMBLY INSTRUCTIONS**

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

NOTE DON'T HOTTEN BOETS ON THE ALE FARTS ARE CONNECTED. 2 FEOFEE ARE REQUIRED WHEN ASSEMBLING							
PART NO	PART IMAGE	QTY	PART NO		QTY	1	2
A1		1	Р	M6*15MM	12	-01	
A2		1	Q	M6*35MM	6	B1 ( )	
B1		1	R	M6*50MM	5		P*6 C1 C2
B2		1	Т		1	B2	
C1		1	U	2	1	R*3	*3 Q*4 R*2 O*2
C2		1	3			4	V*6 5
D		1	3)			P*4	V*6 (5)
D1		1		C1	D D1		
Е		1	C2			D1 E	
N	00	3			1		
0	<b>О</b> м6	5		Q	*2	P*2	

## **ASSEMBLY INSTRUCTIONS**

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

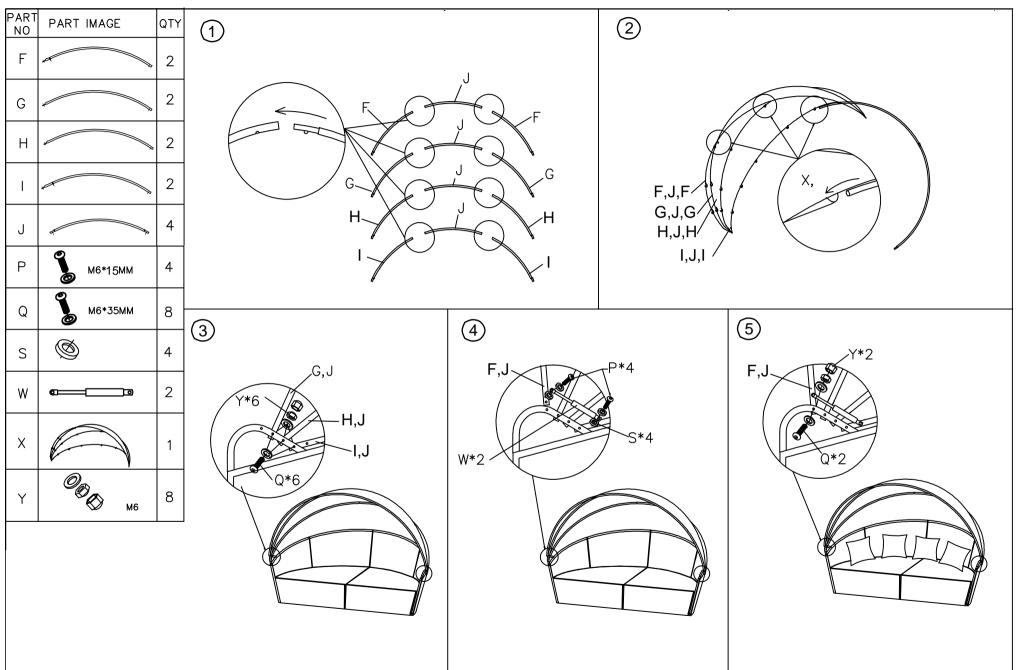

## **ASSEMBLY INSTRUCTIONS**

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

